



Important

⚠ WARNING

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol ⚠ and the words **WARNING** and **NOTE** have special meanings. Pay special attention to the messages highlighted by these signal words:

NOTE: Indicates special information to make maintenance easier or instructions clear.

Please read and understand these instructions completely before installation to avoid any possible injury to yourself or damage to the motorcycle and/or accessory.

NOTE to DEALER: These instructions contain important information for future reference and must be given to the customer.

⚠ WARNING

Installation of these Engine Guards requires special equipment and know-how. It is strongly recommended that these Engine Guards be installed only by an authorized Suzuki dealer.

Preparation Prior to Installation

1. Park motorcycle in vertical position. Allow engine and exhaust to cool completely to reduce risk of burns.
2. Remove the front seat.
3. Remove the rear gas tank mount bolt using a 12mm socket. (See Figure #1) Remove the two plastic push clips that attach the side panels to the frame. To remove the push clips, push in the center round post and then gently pry the clips up and out of their holes. Save the clips and gas tank mount bolt. Slide the gas tank approximately 4 inches to the rear.
4. Remove the steering head covers by removing the top center plastic push clip, the two phillips head screws, and the two button head bolts from the top of the radiator cowl on both sides using a 4mm allen socket. (See Figure #2)
5. Remove the radiator cowl as an assembly by first leaning it forward at the top. Pull forward and down at the lower mounting hooks, near the foot peg mounts. Slide the cowl assembly down under the bike and then pull it completely away from the bike. Be careful not to break off the hooks or damage the paint when removing the cowl.

⚠ WARNING

Indicates potential hazard that could result in death or injury.

